



1. Login to the Lockt Software.

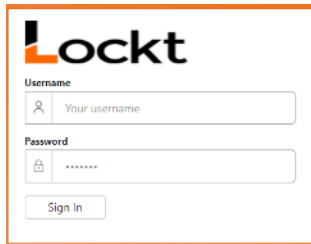


The login form for Lockt software. It features the Lockt logo at the top left. Below the logo, there are two input fields: 'Username' with a person icon and 'Password' with a lock icon. A 'Sign In' button is located at the bottom left of the form.

2. From the Home screen of the Lockt Software.

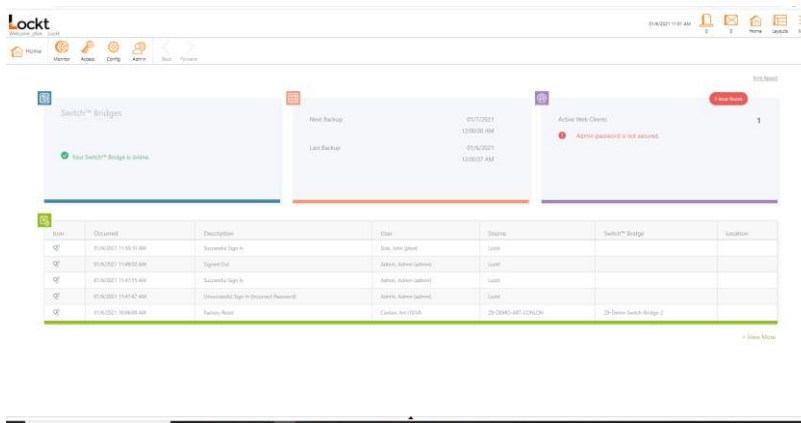

3. Navigate to the Switch Bridges page under the Config menu. Switch Bridges page shows the bridge.

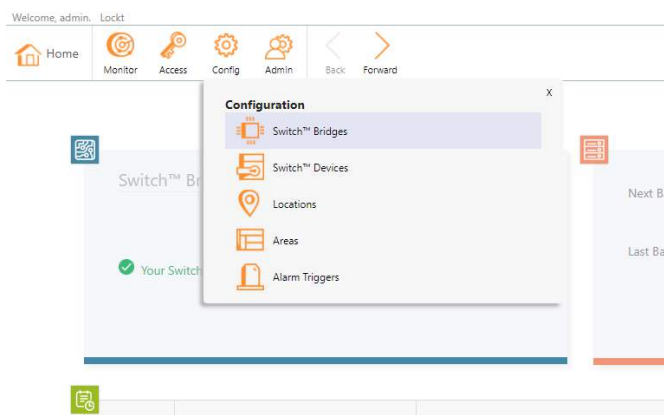

4. Select the bridge under Name button to populate Bridge information.

The screenshot shows the Lockt SecureAccess web interface. On the left, there's a sidebar with a search bar and a table listing bridges. The table has columns for 'Name' and 'Location'. One bridge is listed: 'Z9-Demo-Switch-Bridge-1'. On the right, the configuration page for this bridge is shown. It includes fields for Name, IP Address, Port, Status, Serial Number, Firmware Version, and Location. The 'Name' field is currently selected, and the 'Add Switch™ Device' button is highlighted in yellow.


5. Select the Modify button on the menu tab. Select Add Switch Device.

This screenshot is similar to the previous one, showing the configuration page for the bridge. The 'Add Switch™ Device' button is highlighted in yellow, indicating the next step in the process.


6. A Modify Switch Bridge window appears. Type a unique name and select Add.

The screenshot shows a modal dialog box titled 'Modify Switch™ Bridge'. It contains a question 'Add Switch™ Device?' and a sub-instruction 'Press Add button to Add Switch™ Device.' Below this is a text input field labeled 'Name'. At the bottom right, there are 'Add' and 'Cancel' buttons.

7. Select Config menu then select Switch Devices.

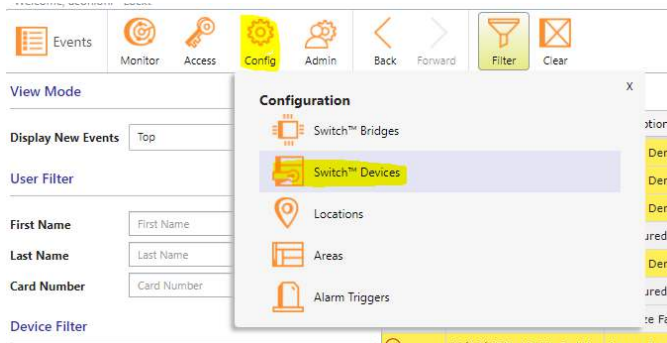

8. The page shows the cores that were added.

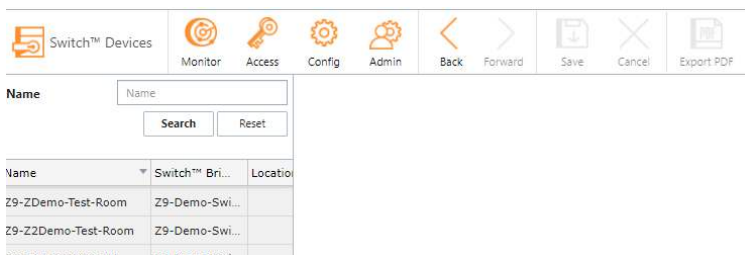

9. Select the core from the list to see the settings.

